



NOSE ASSEMBLY DATA SHEET

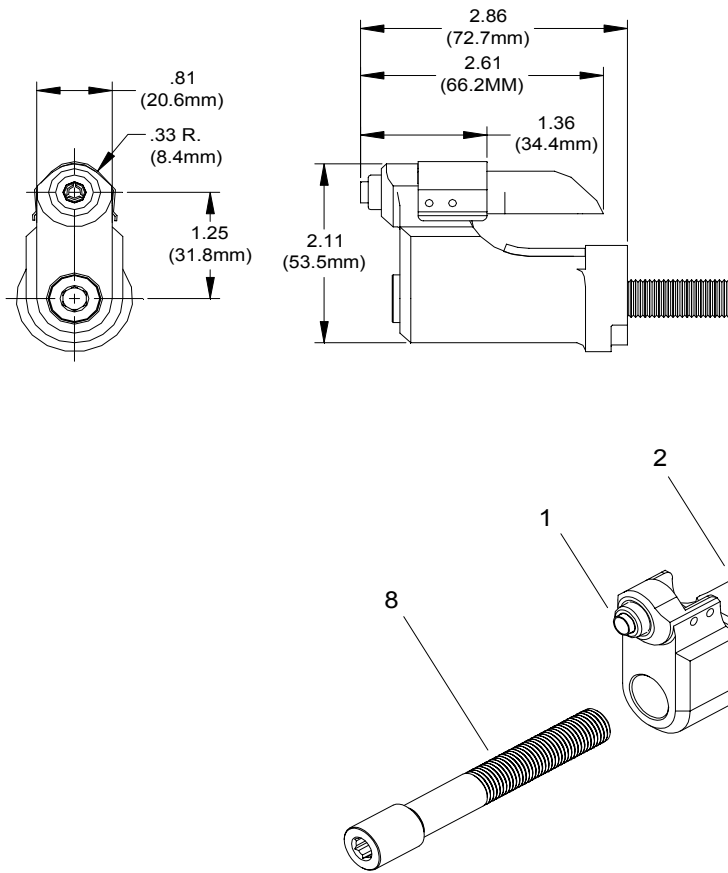

CAUTION:
Pintail may eject forcibly. USE DEFLECTOR TO PREVENT SEVERE PERSONAL INJURY. Cap (10) use for closed access applications only or when clearance is an issue!

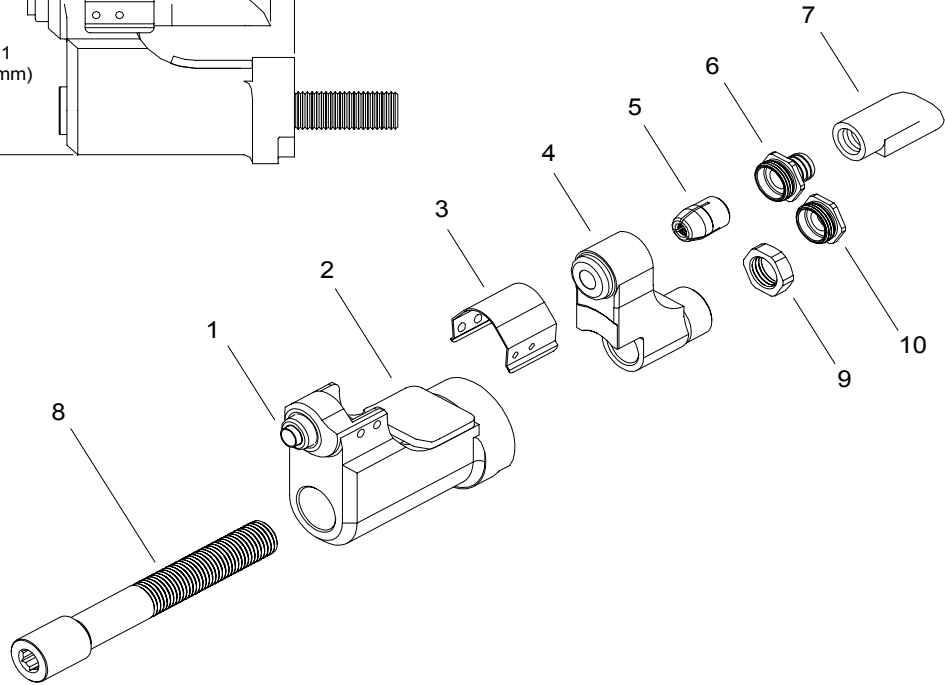

ASSEMBLY INSTRUCTIONS:

On front of GB206A-375 Installation Tool remove screw and stop. With collet placed in anvil, install on tool. Slide drawbar thru anvil and collet. Screw nut on rear of draw bar and lock against collet. Screw draw bar into piston until it stops. Replace screw and stop on tool.

*Use Adapter No. 751206.

**Use Adapter No. 353206.

1/11 REV. 9/12

GAGE BILT

GAGE BILT Inc.

44766 Centre Court (586) 226-1500
Clinton Twp., MI 48038 (586) 226-1505 Fax
e-mail:solutions@gagebilt.com / www.gagebilt.com

Type:		Fasteners:		Recommended Tool:	
Non Self-Releasing 13/64", 17/64" & 21/64" Ø		2 ASP®, ASP PF, ASP FF ASP F & ASP LC		GB206A-375	
				Alternate Tools: *GB752, **GB745 & *GB722	
Ref. No.	Qty.	Description	*ASP06-206G-27OS	*ASP08-206G-27OS	ASP10-206G-27OS
1	1	Cap Assembly	10142	10143	10174
2	1	Anvil Asembly (Inc. #1)	19988	19989	19980
3	1	Guard	60426	60426	60426
4	1	Collet	20722-1	20722-1	20722-1
5	1	Super-Grip Jaw Assembly	30656-S10	30864-S15	30863-S4
6	1	Barbed Retainer	70569	70569	70569
7	1	Deflector	61107	61107	61107
8	1	Drawbar	71120	71120	71120
9	1	Nut	70546	70546	70546
10	1	Cap	70571	70571	70571

ASP® IS A REGISTERED TRADEMARK OF ALCOA INC.