



NOSE ASSEMBLY DATA SHEET

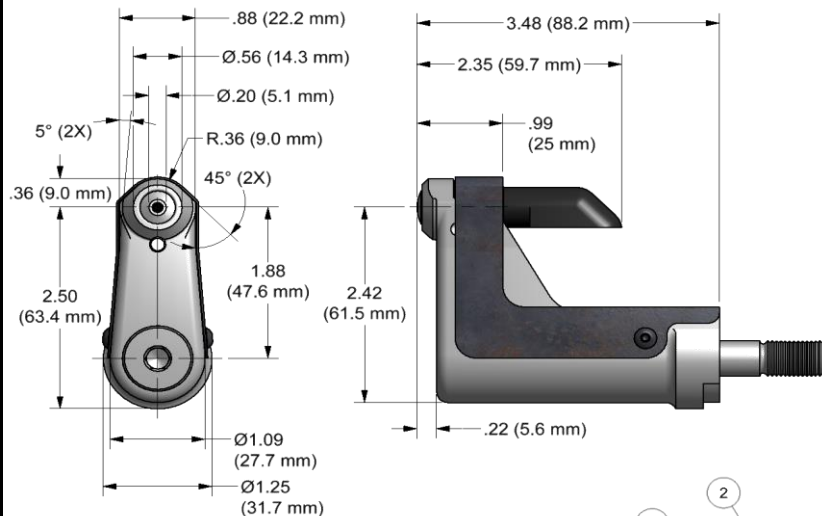

CAUTION:
Pintail may eject forcibly. USE DEFLECTOR TO PREVENT SEVERE PERSONAL INJURY.

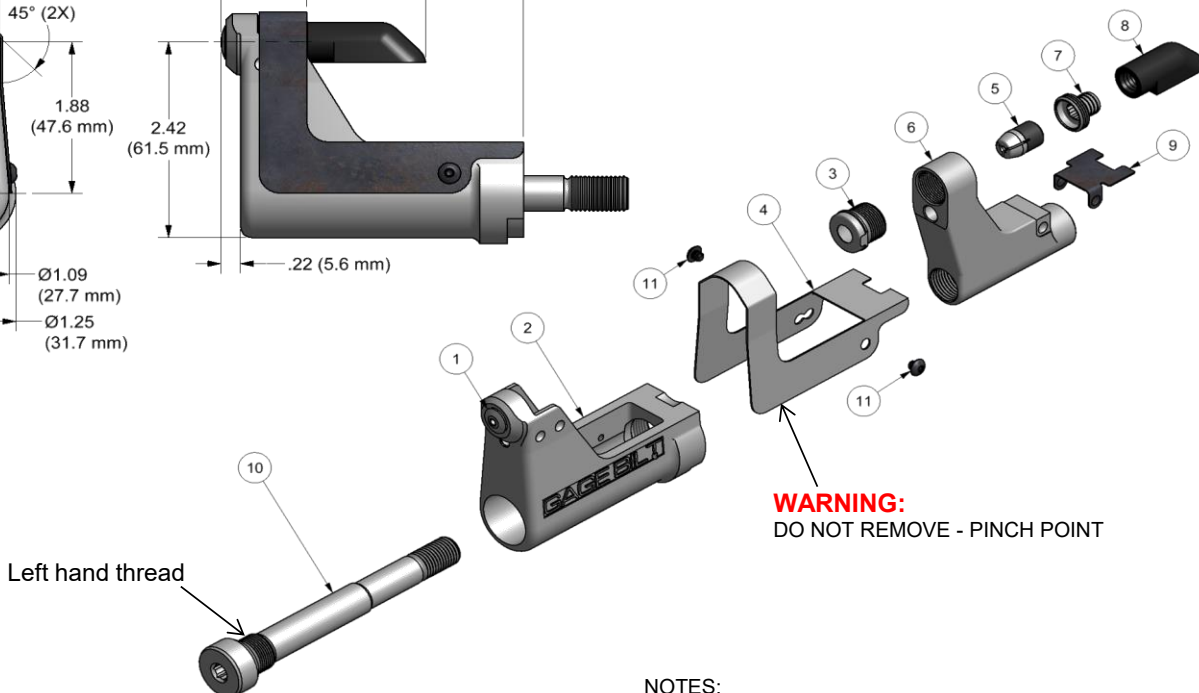

ATTACHING NOSE ASSEMBLY TO TOOL:

1. Cycle tool to ensure piston is full forward.
2. Disconnect tool from power source.
3. Remove screw and stop from tool.
4. Apply Vibra-TITE® part no. 405124 to threads on drawbar.
5. With nose assembly completely assembled, hold collet full forward in anvil and thread drawbar into piston.
6. In approximately 2-3 turns, the anvil assy threads will also engage onto tool, continue to thread drawbar and anvil completely on tool.
7. Back-off assy, no more than 1/2 turn, to position notch on anvil allowing screw and stop to be reassembled onto tool.

NOTES:
1. Nose assembly shipped with 60447 stop.

8/24 REV 9/25



*Use Adapter No. 751206-1 (No stroke limiter needed).
Optional use 713206 (No stroke limiter needed).
**Use Adapter No. 353206-1 & 745160 stroke limiter.

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fasteners:		Recommended Tool:	
1/8" Ø		"A" CODE NAS1398A, NAS1399A NAS1738A, NAS1739A		GB206-500(A)	
				Alternate Tools: *GB751, GB731OS/206, **GB745 & GB110AOS	
Ref. No.	Qty.	Description		4A-370SSG	
1	1	Anvil Insert		10488	
2	1	Anvil Assembly (Incl. #1)		13584	
3	1	Collet Cartridge		27704	
4	1	Guard		60443	
5	1	Super Grip Jaw Assembly		30425-S9	
6	1	Collet Housing		20743	
7	1	Barbed Retainer		70580	
8	1	Deflector		61107	
9	1	Backguard		60444	
10	1	Drawbar		71153	
11	2	Button Head Cap Screw		408511	

VIBRA-TITE® IS A REGISTERED TRADEMARK OF OAKLAND CORPORATION.