



NOSE ASSEMBLY DATA SHEET

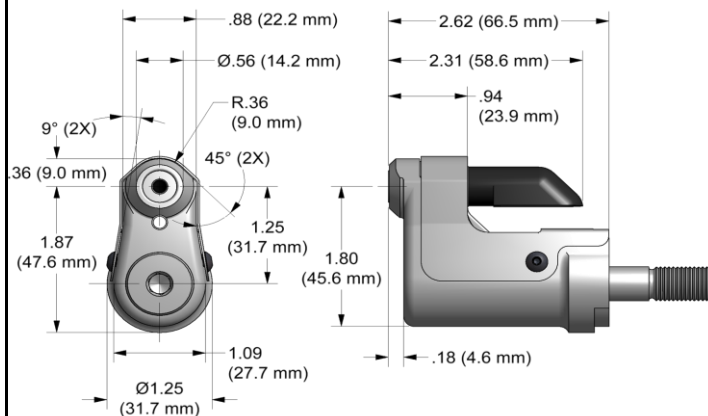

CAUTION:
Pintail may eject forcibly. USE DEFLECTOR TO PREVENT SEVERE PERSONAL INJURY.

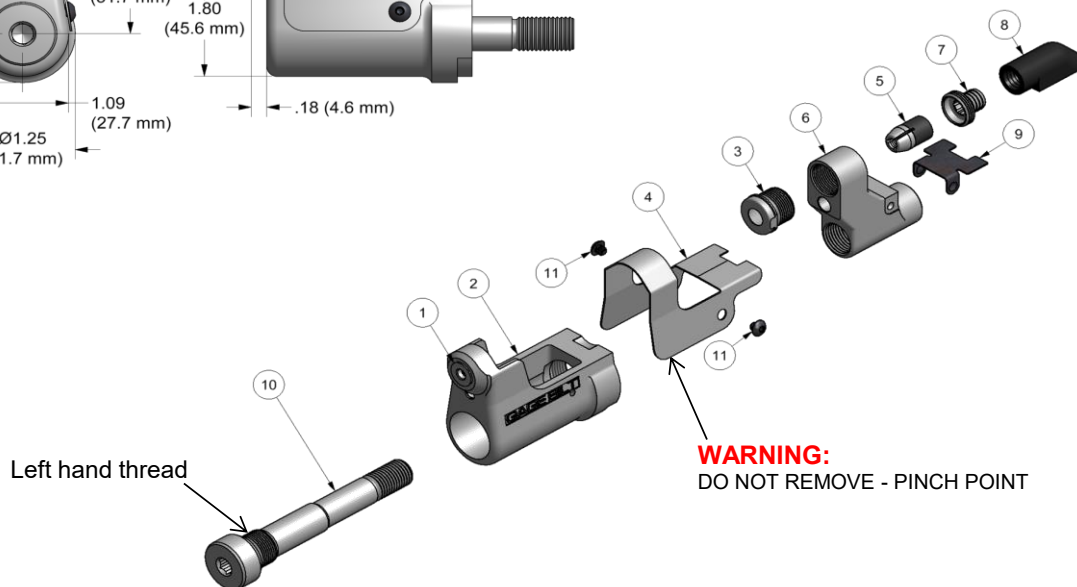

ATTACHING NOSE ASSEMBLY TO TOOL:

1. Cycle tool to ensure piston is full forward.
2. Disconnect tool from power source.
3. Remove screw and stop from tool.
4. Apply Vibra-TITE® part no. 405124 to threads on drawbar.
5. With nose assembly completely assembled, hold collet full forward in anvil and thread drawbar into piston.
6. In approximately 2-3 turns, the anvil assy threads will also engage onto tool, continue to thread drawbar and anvil completely on tool.
7. Back-off assy, no more than 1/2 turn, to position notch on anvil allowing screw and stop to be reassembled onto tool.

NOTES:

1. Nose assembly shipped with 60447 stop.

7/25 REV 8/25



*Use Adapter No. 751206-1 & 722143 stroke limiter.
Optional use 731206 (No stroke limiter needed).
**Use Adapter No. 353206-1 & 745160 stroke limiter.

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fasteners:	Recommended Tool:
1/4" Ø		Magna-Lok®, Magna-Bulb® & Hemlok® Counter Sunk and Protruding Head Serrated Stem Structural Rivets	GB206-500(A)
Ref. No.	Qty.	Description	MGL08-27OSSG
1	1	Nose Tip	12353
2	1	Anvil Assembly (Incl. #1)	13622
3	1	Collet Cartridge	27704
4	1	Guard	60442
5	1	Super Grip Jaw Assembly	30864-S18
6	1	Collet Housing	20742
7	1	Barbed Retainer	70580
8	1	Deflector	61107
9	1	Backguard	60519
10	1	Drawbar	71151
11	2	Button Head Cap Screw	408511

VIBRA-TITE® IS A REGISTERED TRADEMARK OF OAKLAND CORPORATION. MAGNA-LOK® & MAGNA-BULB® ARE A REGISTERED TRADEMARKS OF HOWMET AEROSPACE. HEMLOK® IS A REGISTERED TRADEMARK OF AVDEL UK LIMITED.