



NOSE ASSEMBLY DATA SHEET

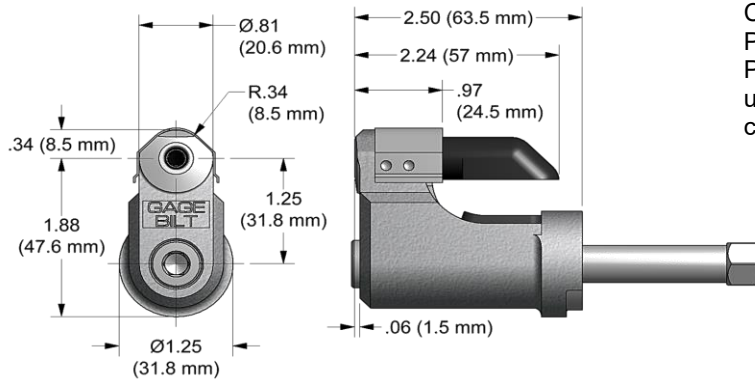

CAUTION:

Pintail may eject forcibly. USE DEFLECTOR TO PREVENT SEVERE PERSONAL INJURY. Cap (9) use for closed access applications only or when clearance is an issue!

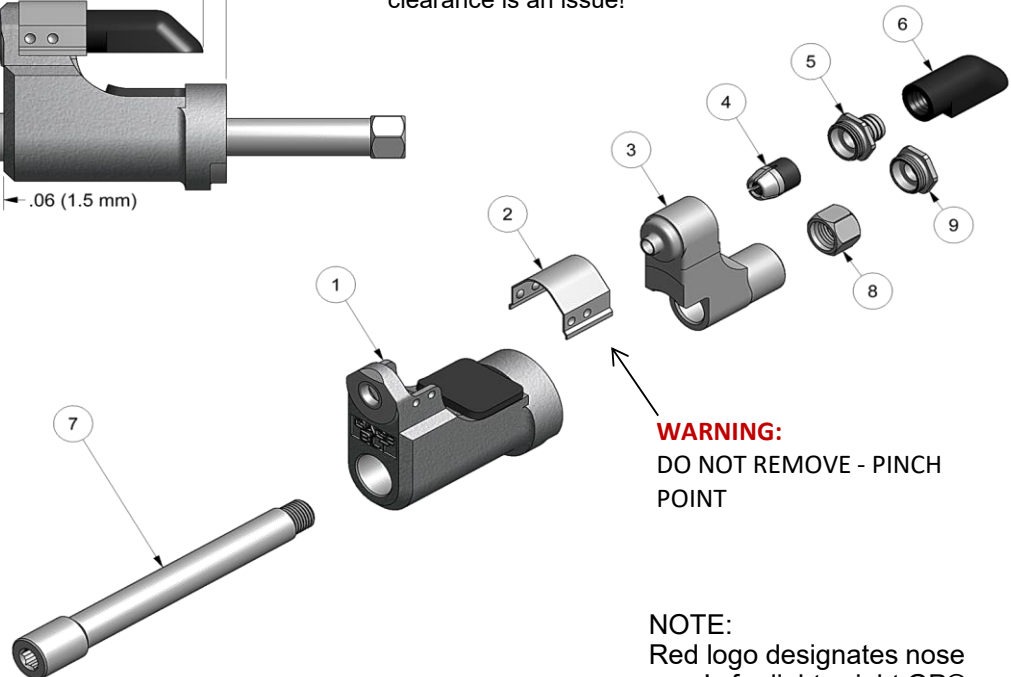

WARNING:

DO NOT REMOVE - PINCH POINT

NOTE:

Red logo designates nose assy's for lightweight GP® fasteners.

ATTACHING NOSE ASSEMBLY TO TOOL:

1. Cycle tool to ensure piston is full forward.
2. Disconnect tool from power source.
3. Remove screw and stop from tool.
4. Thread nose assy to tool. Apply Vibra-TITE® part no. 405124 to threads on drawbar.
5. Slide drawbar thru anvil and collet. Screw nut "counterbore in" on rear of drawbar.
6. Connect tool to power source. Cycle the tool to rear position. While holding actuator down, disconnect tool from power source.
7. Using a 1/4" hex wrench and a 1/2" socket wrench, tighten nut on drawbar. Replace screw and stop on tool.
8. Back-off assy, no more than 1/2 turn, to position notch on anvil allowing screw and stop to be reassembled onto tool.



*Use Adapter No. 751204.

**Use Adapter No. 353204.

1/11 REV 9/18

GAGE BILT
MADE in USA

44766 Centre Court Clinton Twp. MI 48038 USA
Ph: +1 (586) 226-1500 Fax: +1 (586) 226-1505
solutions1@gagebilt.com / www.gagebilt.com

Type:		Fasteners:		Recommended Tool:	
Non Self-Releasing 4mm, 5mm & 6mm $\varnothing$		MLGP® Lockbolt		GB204(A)	
				Alternate Tools: *GB731 & **GB745	
Ref. No.	Qty.	Description	MLGP4-204C-25OS	MLGP5-204C-25OS	MLGP6-204C-25OS
1	1	Anvil	10461	15555	16650
2	1	Guard	60426	60426	60426
3	1	Collet	20411	20662	20676
4	1	Super-Grip Jaw Assy	30543-S9	30654-S9	30862-S5
5	1	Barbed Retainer	70569	70569	70569
6	1	Deflector	61107	61107	61107
7	1	Drawbar	71116	71116	71116
8	1	Nut	71114	71114	71114
9	1	Cap	70571	70571	70571

VIBRA-TITE® IS A REGISTERED TRADEMARK OF OAKLAND CORPORATION. GP® AND MLGP® ARE REGISTERED TRADEMARKS OF HOWMET AEROSPACE.