



NOSE ASSEMBLY DATA SHEET

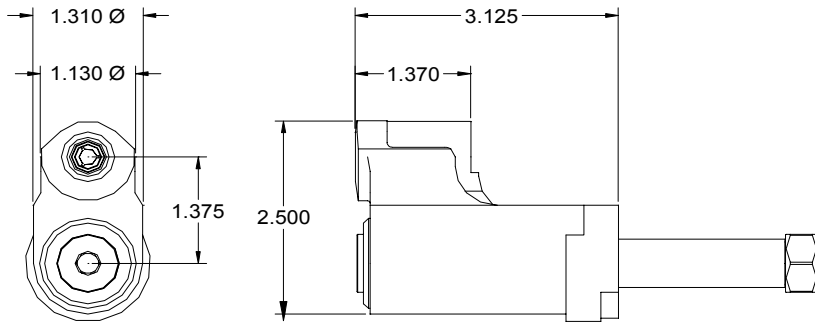

CAUTION:
Pintail may eject forcibly.
TO PREVENT SEVERE PERSONAL INJURY,
use for closed access applications only!

WARNING:
KEEP FINGERS AND HANDS AWAY
FROM NOSE ASSEMBLY DURING
OPERATION TO PREVENT SEVERE
PERSONAL INJURY.

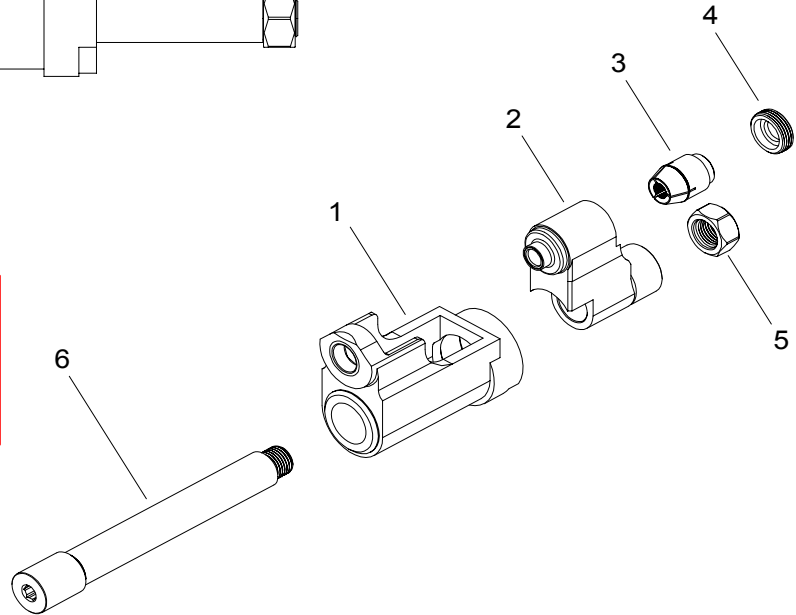

ASSEMBLY INSTRUCTIONS:

On front of GB205A Installation Tool remove screw and stop. With collet placed in anvil, install on tool. Slide drawbar thru anvil and collet. Using a 1/4" allen wrench and a 3/4" end wrench attach nut on rear of draw bar. Replace screw and stop on tool.

*Use Adapter No. 353205.

**Use Adapter No. 353205 with 480153 stroke limiter.

***Use Adapter No. 352205 with 480453 stroke limiter.

5/12

GAGE BILT

GAGE BILT Inc.

44766 Centre Court (586) 226-1500
Clinton Twp., MI 48038 (586) 226-1505 Fax
e-mail:solutions@gagebilt.com / www.gagebilt.com

Type:		Fastener:	Recommended Tool:
Non Self-Releasing 1/4", 5/16" & 3/8" Ø		NAS Shear and NAS Tension Pull Type Lockbolts, C6L® & GP® Lockbolts	GB205A
			Alternate Tools: *GB745, **GBP4801B & ***GBP4804
Ref. No.	Qty.	Description	NAS10-205C-31
1	1	Anvil Assembly	11038
2	1	Collet	21026
3	1	Super-Grip Jaw Assembly	31028-S1
4	1	Cap	61101
5	1	Nut	71110
6	1	Drawbar	71109